

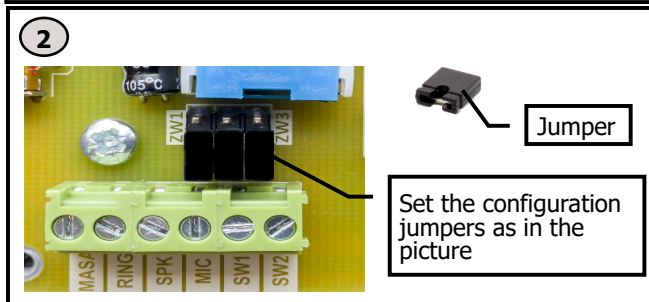


INSTALLATION OF A 6-WIRE INTERCOM

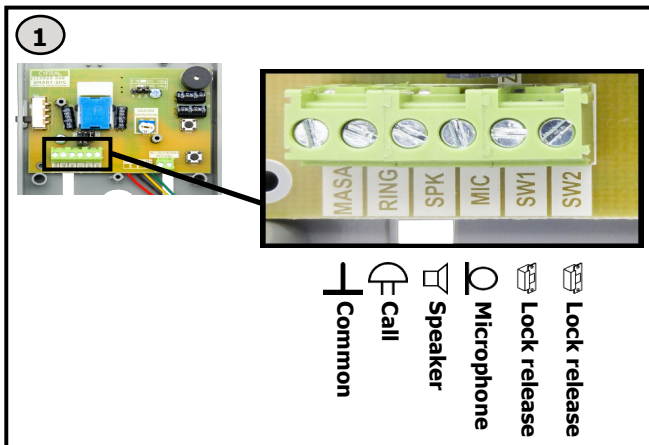


CALL GENERATOR MODE JUMPER

Position 1-2 buzzer call
Position 2-3 electronic call handset loudspeaker

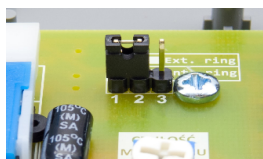

Buzzer call

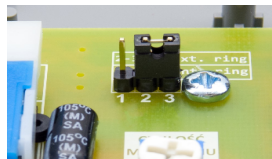

Electronic call handset loudspeaker




Additional door bell button.

12V AC/DC

UNIPHONE REGULATION ELEMENTS

1. The main connector for link the uniphone with control panel
2. Microphone sensitivity adjustment
3. Unit configuration jumpers
4. Multifunction button connector
5. Multifunction button
6. Lock release button
7. 3-position call signal's volume control switch:
 - loud call
 - medium call
 - no sound
8. Call generator mode jumper

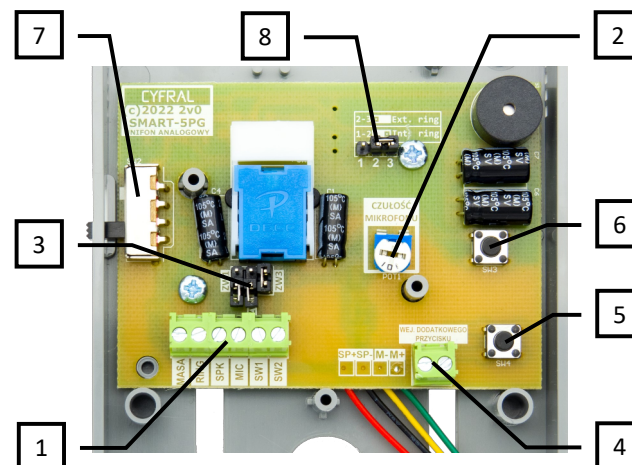

MULTIFUNCTION BUTTON (5)

The multi-function button is used to connect additional devices (light switches, gate control etc.) It is independent from the intercom system and is a regular short circuit button.

Maximum Load: 50mA 12V AC/DC

Manufacturer:

CYFRAL Chabelska i Wspolnicy S.J.
 ul. Konstancyńska 62/70
 95 - 100 ZGIERZ POLAND
 e-mail: info@cyfral.pl
 www.cyfral.pl



CYFRAL®

HOUSEHOLD INTERCOM

SMART-5PG



INSTRUCTION MANUAL

COMPATIBILITY TABLE

SMART 5PG		Lock release	Microphone	Common (MASA)	Speaker	Call
OLD UNIPHONE						
ACET		5	10	2	7	9
AIPHONE	VC-K	4	2	3	1	B
AMPER		D	A	C	B	E
		F	L	N	M	E
ATEA		2	4	3	1	5
AUTA		10	3	4	7	12
AUTELCO	P5	A	1	B	2	
BELL		Z	R	O	T	I
BITRON	AN0002	9	2	6	1	C7
BOGEN		T	1	3	2	6
BPT		2	1	4	5	3
BTICINO		1	8	10/11/7	9	14
CENTRAMATIC		4	2	1	3	5
CITESA		1	4	C	3	B
CITVOX		5	10	0/9	7	T
COMELIT	VOX ART	P1	3	0/4/C	2	1
	VOX ART	P1	3	4	2	5
ELBEX			MIC	LOW	SPEC	+
ELBOX		2	6	9	4	+
		7	2	3/4/5	1	6
ELVOX		2	6	9	4	+
	801-822, 870	7	2	3/4/5	1	6
	902/100	7	2	3/4/5A	1	6A
FARFISA		5	1	3	2	6
		5	1	3	2	9
FERMAX	REKTO TF-4	P	A	C	B	E
	TF-1Z, TN-Z	1	2	3	6	4
	20440.21100	1	2	3	6	4
FRINGE		2	3	1	6	4
GAME		P	2	3	1	Z
GIRO		2	3	1	6	4
GOLMAR		X	M	A	S	N
		11	5	3	4	12
		C2	5	3	10	7
	T-600	T	1	3	2	6
T-2800	4	5	3	10	7	
OSTELVI		9	2	6	1	7
PORMAT		4	3	2/5	1	V
RIPOLLES		3	1	8	2	4
RITTO	ELEGANT 40518	11	12	13	15	14
SAFNAT		4	1	2	3	V
SIEDLE	HT611-01	1	12	9/C	11	7
SPRINT		"I"	1	3	2	6
STR	NH200/205	1	M	O	T	S
TAGRA		8	2	6	1	4
TEGUI GL		3	4	2	5	1
TELEVES		4	2	3	1	T
TESLA	DDZ85	1/2	2	3	6	4
TUNE		8	2	6	1	4
URMET	1131, 1132, 1133, 1134	9	2	6	1	CA
	DOMUS 1130	5	1	3	2	4
	DOMUS 1131	9	2	10	1	4
Videx		5	1	7	2	6
		5	1	7/3	2	4
YUS PHONE		EL	T	-	R	B/PT

We are very pleased that you decided to purchase the **SMART-5PG** intercom unit. We believe that the top-tier quality and functionality of our product will meet your expectations.

NOTE :


The uniphone ensures proper operation on **MULTIWIRES** analog systems.

Before replacing the uniphone with a new one, we recommend saving the connection configuration of the old uniphone or taking a photo.


If there has been no uniphone installed in the past, it is recommended to call intercom installation services.

ASSEMBLY



Tools needed:

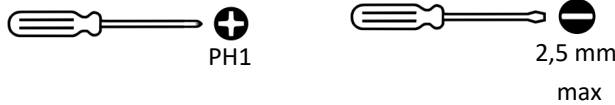

Before installing and configuring the uniphone, holder (base) must be opened.

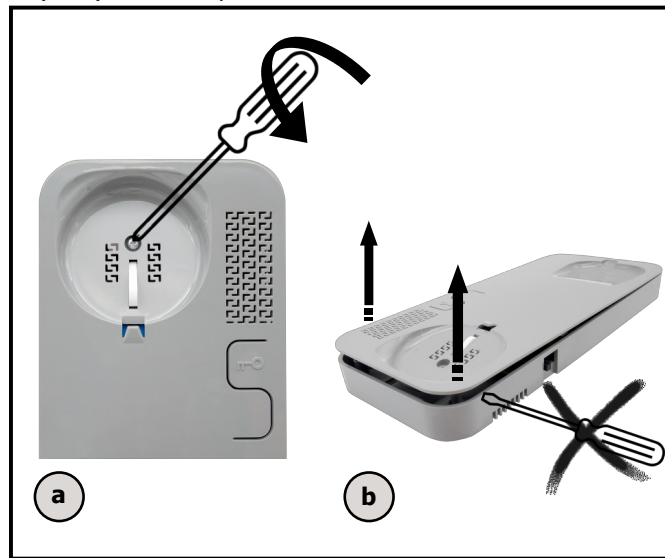

INSTALLATION OF A 5-WIRE INTERCOM

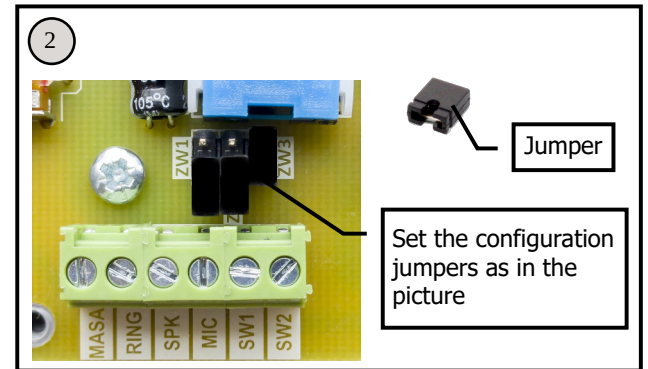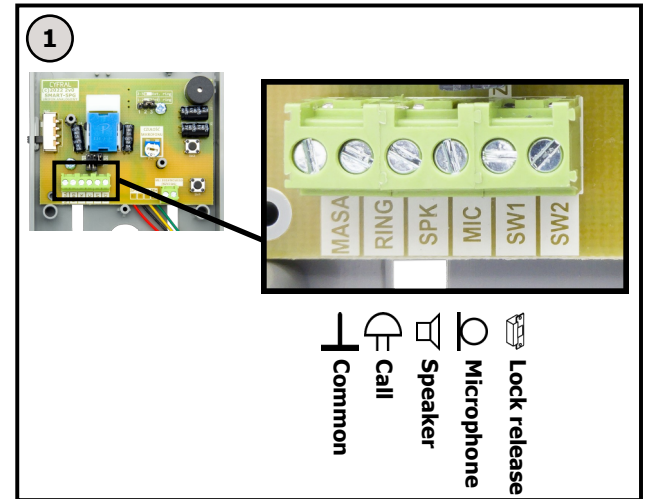

DOWNLOAD THE MANUAL IN OTHER LANGUAGES

SPANISH
FRENCH
GERMAN
ENGLISH

